



# Manual

Version 1.0

DWL-AG132

## Wireless 108AG USB Adapter



# Table of Contents

---

|                                       |    |
|---------------------------------------|----|
| Table of Contents .....               | 2  |
| Package Contents .....                | 3  |
| Introduction .....                    | 4  |
| Features and Benefits .....           | 6  |
| Wireless Basics .....                 | 7  |
| Installation Considerations .....     | 8  |
| Getting Started .....                 | 9  |
| Using the Configuration Utility ..... | 12 |
| Networking Basics .....               | 25 |
| Troubleshooting .....                 | 39 |
| Technical Specifications .....        | 42 |
| Contacting Technical Support .....    | 44 |
| Warranty .....                        | 45 |
| Registration .....                    | 48 |

# Package Contents



- **D-Link AirPremier® AG DWL-AG132**  
Wireless AG USB 2.0 Adapter
- Manual on CD
- Cradle

If any of the above items are missing, please contact your reseller.

## Minimum System Requirements

- A computer or laptop with an available USB 2.0 port
- Windows XP/2000
- At least 64MB of memory and a 500MHz processor
- Properly installed and working USB Controller

# Introduction

The D-Link *AirPremier*® AG DWL-AG132 Wireless AG USB Adapter is an 802.11a/802.11g high-performance, convenient Plug & Play USB 2.0 solution that brings wireless networking to your laptop or desktop PC.

With a maximum wireless signal rate of up to 54Mbps (108Mbps\* in Turbo mode), and the convenience of both 802.11a and 802.11g connectivity, you can connect to a wireless network at home, at the office or at any wireless hotspot. Now you can stay connected wherever you are and wherever you go.

The DWL-AG132 is Wi-Fi compliant, meaning that it can connect and interoperate with other 802.11b, 802.11g and 802.11a Wi-Fi-compliant wireless routers, access points and adapters. The DWL-AG132 connects to any available USB port on a laptop or desktop Windows-based computer, and also includes a USB cradle. With the optional USB cradle, the DWL-AG132 can be positioned virtually anywhere at a workstation to achieve the best available wireless signal reception - whether that workstation is in your office, on your deck or patio, by the pool, at the local coffee shop, or in an airport terminal while waiting to board your next flight.


The adapter works with Microsoft Windows XP and Windows 2000 operating systems to ensure that you'll be up and running on a wireless network in just a matter of seconds. Using its default settings, the DWL-AG132 automatically connects to other D-Link *AirPremier* AG wireless products as soon as it's active.

The DWL-AG132 has the newest, strongest and most advanced security features available today. When used with other WPA (Wi-Fi Protected Access) and 802.1x compatible products in a network with a RADIUS server, the security features include:

WPA is offered in two flavors:

**WPA-Personal** is directed at home users who do not have the server based equipment required for user authentication. The method of authentication is similar to WEP because you define a "Pre-Shared Key" on the wireless router/AP. Once the pre-shared key is confirmed and satisfied on both the client and access point, then access is granted. The encryption method used is referred to as the Temporal Key Integrity Protocol (TKIP), which offers per-packet dynamic hashing. It also includes an integrity checking feature which ensures that the packets were not tampered with during wireless transmission.

\*Maximum wireless signal rate derived from IEEE Standard 802.11a/g specifications. Actual data throughput will vary. Network conditions and environmental factors lower actual data throughput rate.



**WPA-Enterprise** is ideal for businesses that have existing security infrastructures in place. Management and security implementation can now be centralized on a server participating on the network. Utilizing 802.1x with a RADIUS (Remote Authentication Dial-in User Service) server, a network administrator can define a list of authorized users who can access the wireless LAN. When attempting to access a wireless LAN with WPA-Enterprise configured, the new client will be challenged with a username and password. If the new client is authorized by the administration, and enters the correct username and password, then access is granted. In a scenario where an employee leaves the company, the network administrator can remove the employee from the authorized list and not have to worry about the network being compromised by a former employee.

**802.1x: Authentication** which is a first line of defense against intrusion. In the authentication process, the Authentication Server verifies the identity of the client attempting to connect to the network. Unfamiliar clients would be denied access.

# Features and Benefits

- **Provides maximum wireless signal rate of up to 54Mbps (108Mbps<sup>1</sup> in Turbo mode).**
- **Compact size** for placement anywhere.
- **Convenience** of Plug & Play installation.
- **Fully 802.11b/802.11g compatible.**
- **Powered by the USB port**; no external power source is required.
- **USB 2.0 standard<sup>2</sup>.**
- **Better Security with 802.1x and WPA** - In addition to 64-, 128-bit WEP encryption, you can also securely connect to a wireless network using 802.1x for wireless authentication, as well as WPA (Wi-Fi Protected Access) providing you a much higher level of security for your data and communication than has previously been available.
- **Optimal wireless reception** using its cradle (included). Position the DWL-AG132 almost anywhere in your workspace to achieve the best reception possible.
- **Supports Infrastructure networks via an access point and Peer-to-Peer communication in Ad-Hoc mode.**
  - **User-friendly configuration and diagnostic utilities.**
  - **Connects at up to 328 feet indoors<sup>3</sup>.**
  - **1 year warranty.**

<sup>1</sup>Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors lower actual data throughput rate.

<sup>2</sup>Using a USB 1.1 port will adversely affect throughput.

<sup>3</sup>Environmental factors may adversely affect range.

# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. D-Link wireless products will allow you access to the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking brings.

A wireless local area network (WLAN) is a computer network that transmits and receives data with radio signals instead of wires. WLANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial to many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

People use WLAN technology for many different purposes:

**Mobility** - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

**Low Implementation Costs** - WLANs are easy to set up, manage, change and relocate. Networks that frequently change can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

**Installation and Network Expansion** - Installing a WLAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings. Wireless technology allows the network to go where wires cannot go - even outside the home or office.

**Inexpensive Solution** - Wireless network devices are as competitively priced as conventional Ethernet network devices.

**Scalability** - WLANs can be configured in a variety of ways to meet the needs of specific applications and installations. Configurations are easily changed and range from Peer-to-Peer networks suitable for a small number of users to larger Infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

# Installation Considerations

The DWL-AG132 lets you access your network using a wireless connection from virtually anywhere within its operating range. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- Keep the number of walls and ceilings between the DWL-AG132 and other network devices to a minimum - each wall or ceiling can reduce your DWL-AG132's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
- Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- Building materials can impede the wireless signal - a solid metal door or aluminum studs may have a negative effect on range. Try to position wireless devices and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
- Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.



# Getting Started

There are basically two modes of networking:

**Infrastructure** – using an access point or router, such as the DI-784.


**Ad-Hoc** – directly connecting to another computer, for Peer-to-Peer communication, using wireless network adapters on each computer, such as two or more DWL-AG132 Wireless Network USB adapters.

On the following pages we will show you an example of an **Infrastructure Network** and an **Ad-Hoc Network**.

An **Infrastructure** network contains an access point or router. The **Infrastructure network** example shown on the following page contains the following D-Link network devices (your existing network may be comprised of other devices):

- A wireless router - **D-Link AirPremier® AG DI-784**
- A laptop computer with a **D-Link AirPremier® AG DWL-AG132**
- A desktop computer with a **D-Link AirPremier® AG DWL-AG132**
- A cable modem - **D-Link DCM-201**

## Setting up a Wireless Infrastructure Network

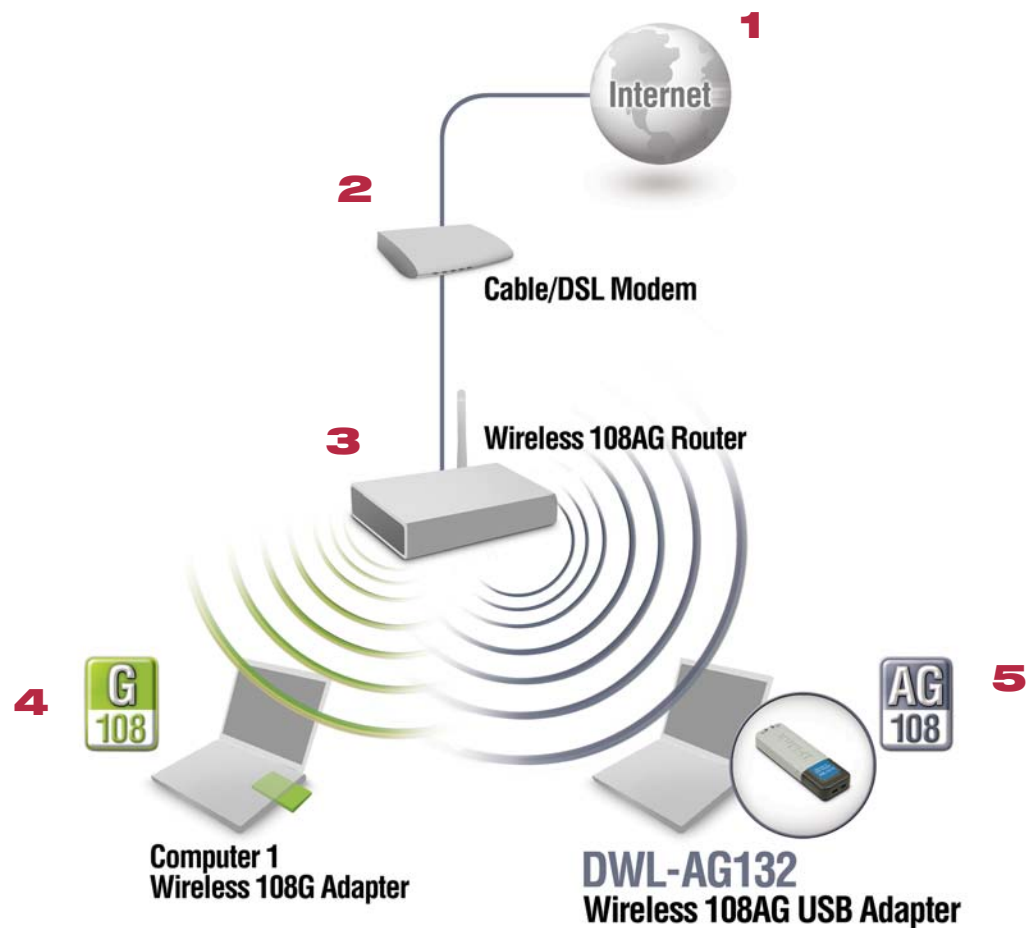

*For a typical wireless setup at home (as shown above), please do the following:*

- 1** You will need broadband Internet access (a cable or DSL-subscriber line into your home or office).
- 2** Consult with your cable or DSL provider for proper installation of the modem.
- 3** Connect the cable or DSL modem to your broadband router.  
(See the Quick Installation Guide included with your router.)
- 4** Install the D-Link AirPremier® AG DWL-AG132 Wireless USB 2.0 adapter into an available USB port on your laptop computer.  
(See the Quick Installation Guide included with the DWL-AG132.)
- 5** Install the D-Link AirPremier® AG DWL-AG132 wireless USB 2.0 adapter into an available USB port on your laptop computer.  
(See the Quick Installation Guide included with the DWL-AG132.)

## Setting up a Wireless Ad-Hoc Network



*For a typical wireless setup at home (as shown above), please do the following:*

- 1** Install the **D-Link AirPremier® AG DWL-AG132** Wireless USB 2.0 adapter into the desktop computer. *(See the Quick Installation Guide included with the product.)*
- 2** Install the **D-Link AirPremier® AG DWL-AG132** Wireless USB 2.0 adapter into the laptop computer. *(See the Quick Installation Guide included with the product.)*
- 3** Set the wireless configuration for the adapters to Ad-Hoc mode, set the adapters to the same channel, and assign an IP address to each computer on the Ad-Hoc network.

### IP Address

When assigning IP addresses to the computers on the network, please remember that the **IP address for each computer must be in the same IP address range as all the computers in the network**, and the subnet mask must be exactly the same for all the computers in the network.

For example: If the first computer is assigned an IP address of 192.168.0.2 with a subnet mask of 255.255.255.0, then the second computer can be assigned an IP address of 192.168.0.3 with a subnet mask of 255.255.255.0, etc.

**IMPORTANT:** If computers or other devices are assigned the same IP address, one or more of the devices may not be visible on the network.

# Using the Configuration Utility

**D-Link AirPremier® AG DWL-AG132** uses the **Configuration Utility** as the management software. The utility provides the user an easy interface to change any settings related to the wireless adapter. After you have completed the installation of the DWL-AG132 (refer to the *Quick Installation Guide* that came with your purchase) whenever you start the computer, the **Configuration Utility** starts automatically and the system tray icon is loaded in the toolbar (see illustration below.\*) Clicking on the utility icon will start the **Configuration Utility**. Another way to start the **Configuration Utility** is to click on **Start>Programs>D-Link AirPremier AG >D-Link AirPremier AG Utility**.

If you are using Windows XP, you can use either the Zero Configuration Utility or the D-Link Configuration Utility.

To use the D-Link Configuration Utility with XP, right-click on the wireless network icon in the taskbar in the lower right-hand corner of your computer screen.


In the window that appears, select **View Available Wireless Networks** and click the **Advanced** button. The screen at right will appear.

Select the **Wireless Networks** tab.

Uncheck the box in the properties window that enables windows configuration.

After you have done this, you can then use the D-Link Configuration Utility with XP by clicking on the D-Link Configuration Utility icon.


If the icon does not display in the taskbar, then click on this icon on your desktop to open.

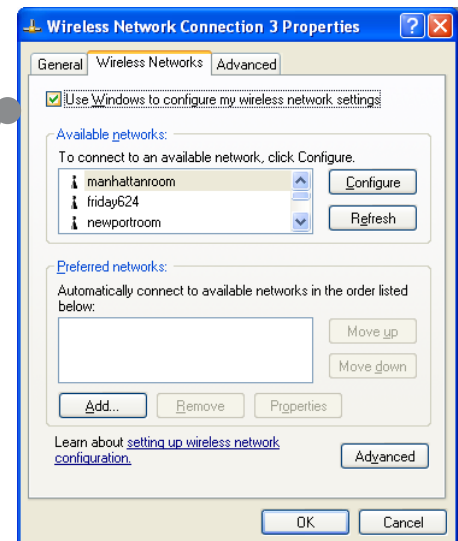

\*Configuration Utility icon in the system tray



## Link Info

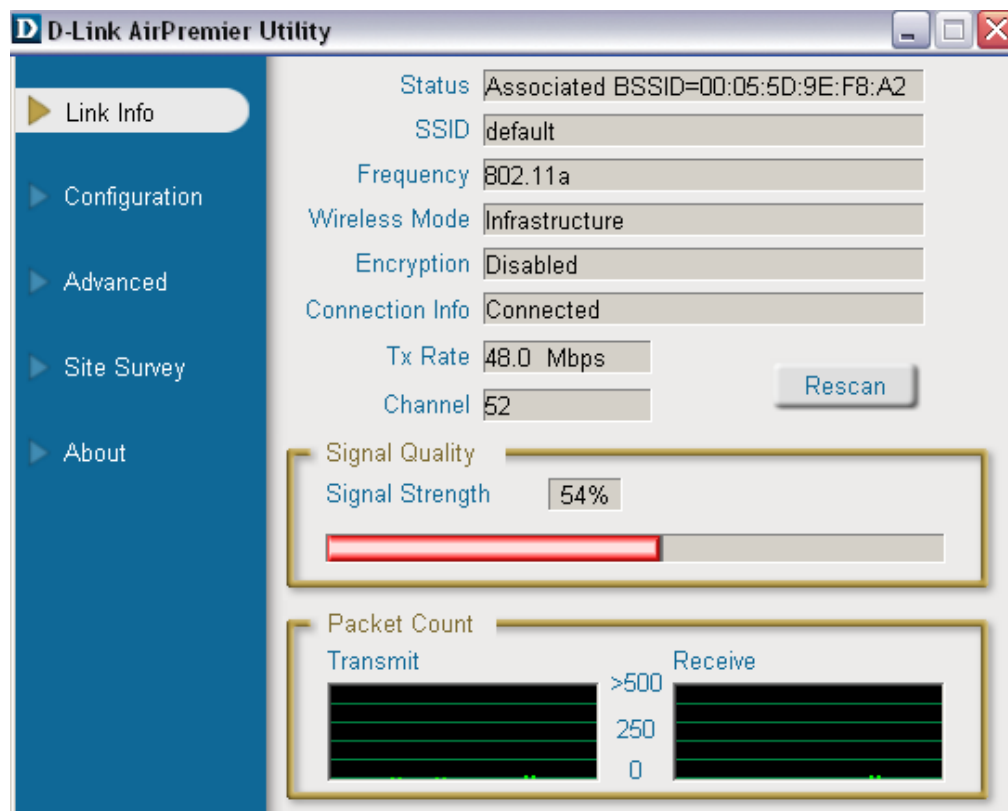

**Status:** Displays the MAC address of the access point or router to which the DWL-AG132 is associated.

**SSID:** The Service Set Identifier is the name assigned to the wireless network. The factory SSID setting is **default**.

**Frequency:** 802.11b indicates that the DWL-AG132 is communicating in the 2.4GHz band.

**Wireless Mode:** Either **Infrastructure** or **Ad-Hoc** will be displayed here. (Please see the *Getting Started* section in this manual for an explanation of these two modes.)

**Encryption:** You can see if WEP (Wired Equivalent Privacy) is **Enabled** or **Disabled** here.

**Connection Info:** Displays the adapter's connectivity to the network.

**Tx Rate:** The default setting is **Auto**; Tx Rate settings are automatically determined for a maximum wireless signal rate of up to 54Mbps (108Mbps\* in Turbo mode).



|                         |  |
|-------------------------|--|
| <b>Channel:</b>         | The default setting is <b>Auto</b> . The channel selection is automatically determined by the DWL-AG132.               |
| <b>Rescan:</b>          | Rescans for the strongest signal with the current SSID and associates with that access point or router.                |
| <b>Link Quality:</b>    | Displays the Link Quality of the DWL-AG132's wireless connection to the access point or router.                        |
| <b>Signal Strength:</b> | Displays the signal strength and the link quality of the DWL-AG132's wireless connection to the access point or router |
| <b>Packet Count:</b>    | Displays the statistics of the data packets that are transmitted and received.   |

## Configuration

**D-Link AirPremier Utility**

▶ Link Info

▶ **Configuration**

▶ Advanced

▶ Site Survey

▶ About

**SSID**

**Wireless Mode**

**Data Encryption**

**Authentication**

**Key Length**

**IEEE802.1X**

☐ 1

☐ 2

☐ 3

☐ 4

**SSID:** The Service Set Identifier is the name assigned to the wireless network. The factory SSID setting is **default**.

**Wireless Mode:** Either **Infrastructure** or **Ad-Hoc** will be displayed here. (Please see the *Getting Started* section in this manual for an explanation of these two modes.)

**Data Encryption:** Select **Enabled** or **Disabled**.

**Authentication:** Choose one of the following modes:  
**Open Authentication** - the DWL-AG132 is visible to all devices on the network.  
**Shared Authentication** - allows communication only with other devices with identical WEP settings.  
**Auto** - will automatically adjust to the Authentication mode of the wireless access point or router.

**Key Length:** Select the key length and either ASCII (e.g., a word) or hexadecimal format.\*

**IEEE802.1X:** Select Enabled or Disabled.


**Keys 1-4:** Select the default key.

**Authentication Config:** When you enable **IEEE802.1X** you will click **Authentication Config**. The **Advanced Security Settings** screen will appear.

**IP Settings:** When you click **IP Settings** in the Configuration window, the pop-up screen (shown below) will appear. Configure the **IP Settings** in this window.

**Apply:** Click **Apply** to save the changes.

**IP settings pop-up window**

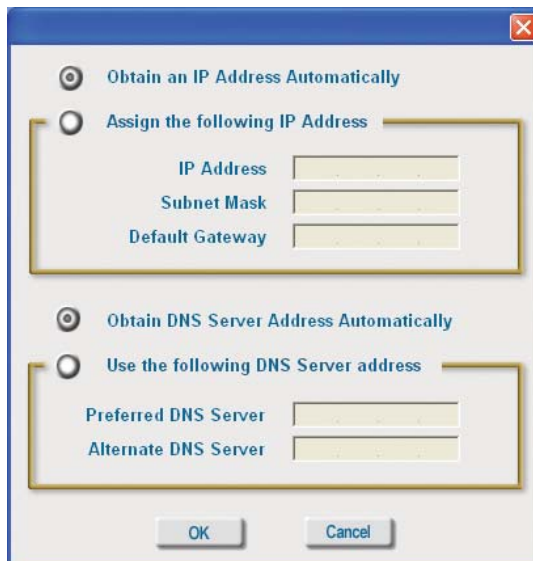
The image shows a 'IP settings pop-up window' with a blue title bar and a close button (X) in the top right corner. The window contains two main sections. The first section has a radio button selected for 'Obtain an IP Address Automatically'. Below it, another radio button is selected for 'Assign the following IP Address', which is enclosed in a yellow rectangular box. This section contains three input fields: 'IP Address', 'Subnet Mask', and 'Default Gateway'. The second section has a radio button selected for 'Obtain DNS Server Address Automatically'. Below it, another radio button is selected for 'Use the following DNS Server address', which is also enclosed in a yellow rectangular box. This section contains two input fields: 'Preferred DNS Server' and 'Alternate DNS Server'. At the bottom of the window are 'OK' and 'Cancel' buttons.

\***Hexadecimal** digits consist of the numbers 0-9 and the letters A-F.

**ASCII** (American Standard Code for Information Interchange) is a code for representing English letters as numbers from 0-127.



## Advanced

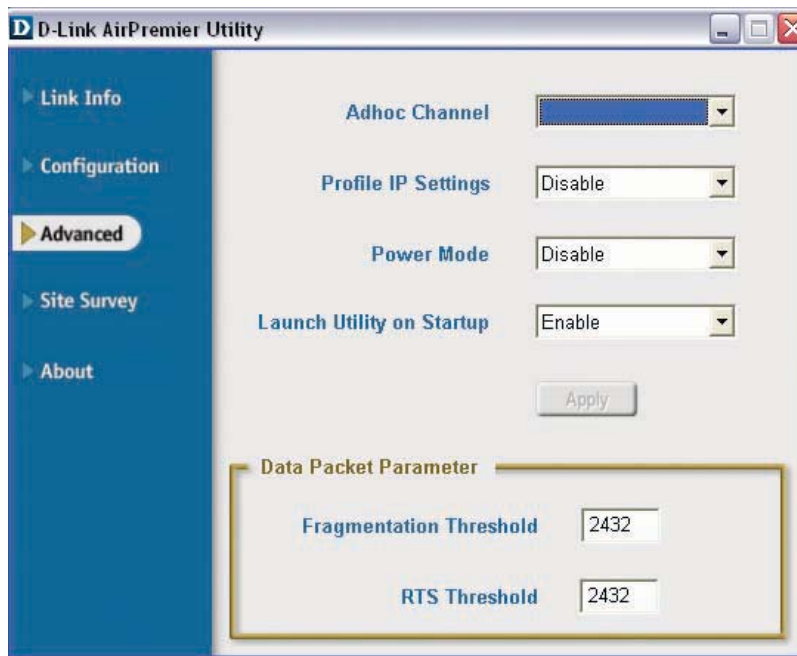

**Ad-Hoc Channel:** All devices in the Ad-Hoc network must be set to the same channel.

**Profile IP Settings:** You can **Enable** or **Disable** the IP Settings portion of your profile here. If you select **Disable** you will need to configure the IP address information each time you connect to a network. If you select **Enable** you will maintain the same IP address information each time you connect to a network.

**Power Mode:** **Disable** - This default setting consumes the most power.  
**Enable** - This setting consumes the least power.

**Launch Utility on Startup:** Select **Enable** or **Disable**.


**Data Packet Parameter:** Select the parameters here.

**Fragmentation Threshold:** This value should remain at its default setting of 2432. If you experience a high packet error rate, you may slightly increase your Fragmentation Threshold within the value range of 256 to 2432. Setting the Fragmentation Threshold too low may result in poor performance.

**RTS Threshold:** This value should remain at its default setting of 2432. If inconsistent data flow is a problem, only a minor modification should be made.

**Apply:** Click **Apply** if you have made any changes

## Site Survey

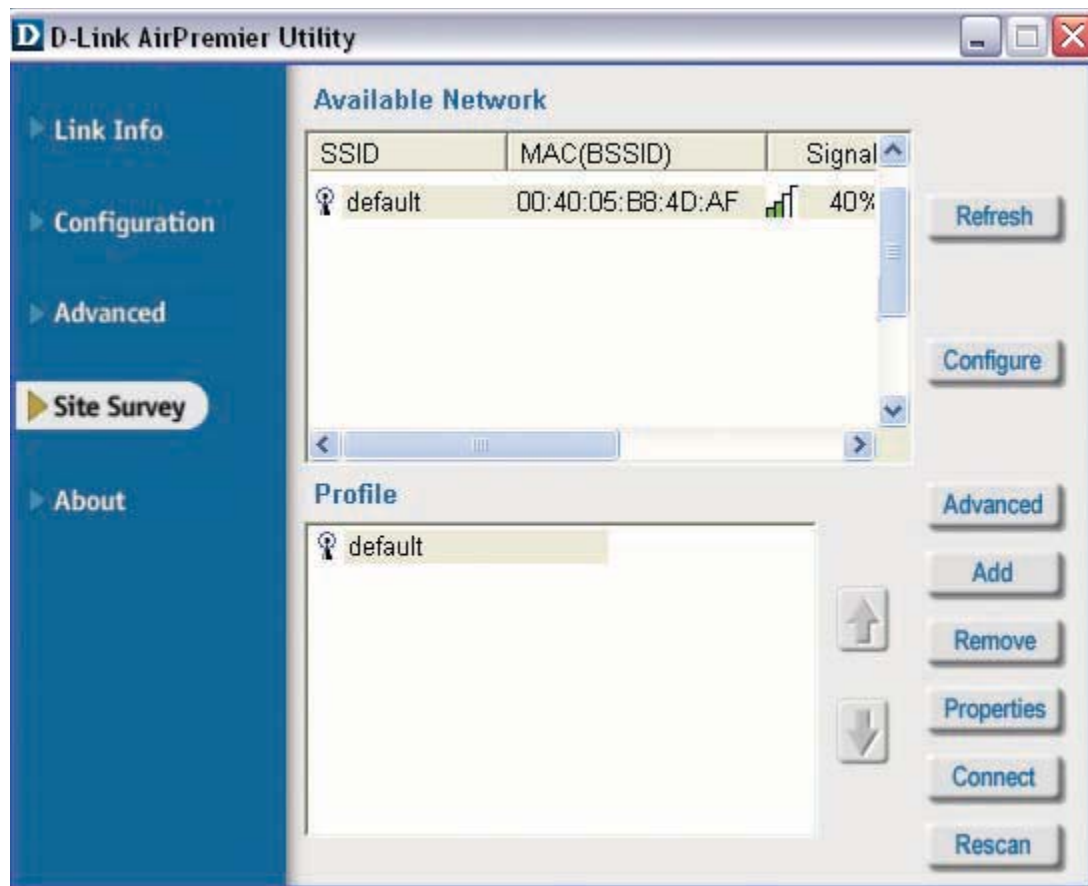


- Available Network:** The top section of the window displays the Available Networks. Scroll up and down the list and highlight the network to which you wish to connect. Click on the **Connect** button.
- Profile :** In the lower half of the screen, you can manage the profiles that you have created for the wireless network at home, at the office and in public places. Scroll up and down and highlight the profile that you wish to configure. You can **Add** or **Remove** a profile, or configure the **Properties** of the profile in order to connect with an available network.
- Refresh:** Click on **Refresh** to get the most updated list of available networks.
- Configure:** Highlight an existing network and click **Configure**; the configuration window on the next page will appear.
- Advanced:** Highlight a network; click **Advanced** and the screen on the next page will appear.

## Site Survey (continued)

- Add:** Click **Add** and the screen on the next page will appear.
- Remove :** Highlight a network profile; click **Remove** to remove a network from the profile list.
- Properties:** Highlight a network profile; click **Properties** and the screen on the next page will appear.
- Connect:** Highlight a network profile; click **Connect** to connect to that network.
- Rescan:** Click **Rescan** to rescan and connect to the strongest signal with the current SSID.

## Advanced

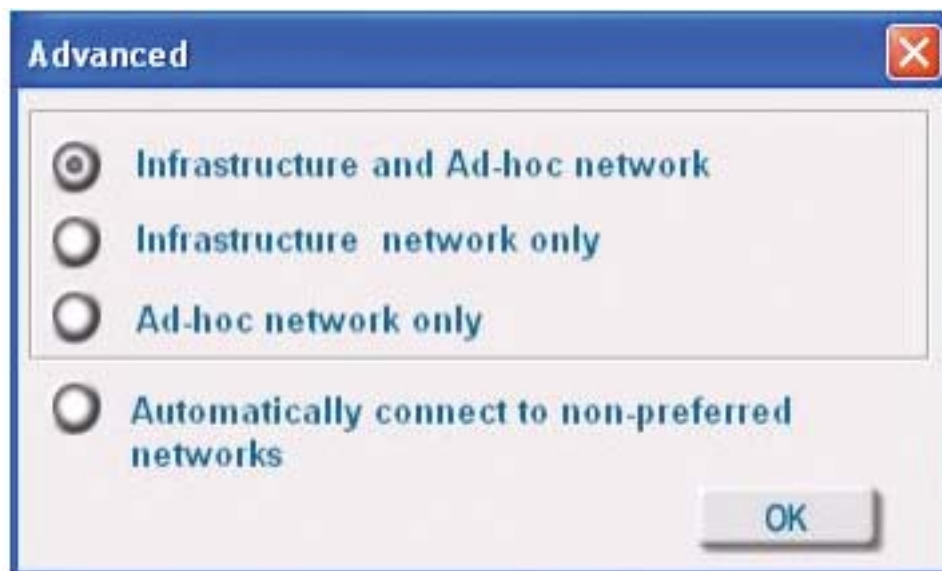

In this window you can select the type of network connection.

Click **OK** to save the changes.

## Site Survey (continued)

### Configuration, Add or Properties

The screenshot shows a 'Configuration' dialog box. It includes the following elements:

- SSID:** A text input field containing 'default'.
- Wireless Mode:** A dropdown menu set to 'Infrastructure'.
- Data Encryption:** A dropdown menu set to 'Enabled'.
- Authentication:** A dropdown menu set to 'Open'.
- Key Length:** A dropdown menu set to '64 bits (40+24) - 10 Hexadecir'.
- IEEE 802.1X:** A dropdown menu set to 'Disabled'.
- Radio Buttons:** Four radio buttons labeled 1, 2, 3, and 4, each with an associated empty text input field.
- Buttons:** 'Authentication Config', 'IP Settings', 'OK', and 'Cancel' buttons at the bottom.

**Add:** If you clicked on **Add**, you can configure, in this window, all the properties of a profile that you wish to add to the network.

**Configuration or Properties:** If you clicked on Configuration or Properties you can configure, in this window, all the properties of a profile that already exists in the network.


**WPA:** If you select WPA in the Authentication field, please see detailed instructions for configuring WPA on the following pages.

**OK** Click OK to save the changes.

## Authentication > WPA

Select the available network to which you want to connect.


Click **Configure**.

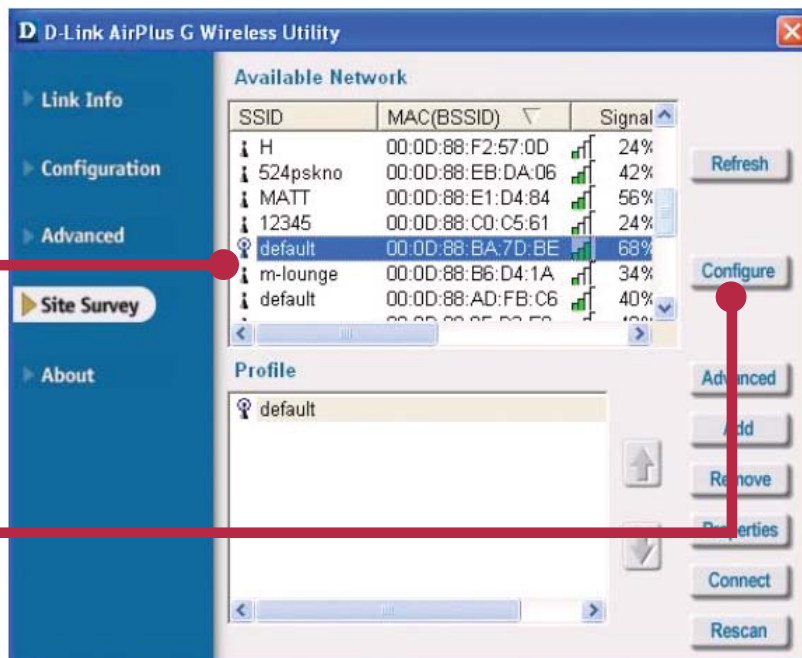


Select **WPA** in the *Authentication* field.

Click **Authentication Config**.

After you click **Authentication Config**, the *Advanced Security Settings* screen will appear. Please see the following page.

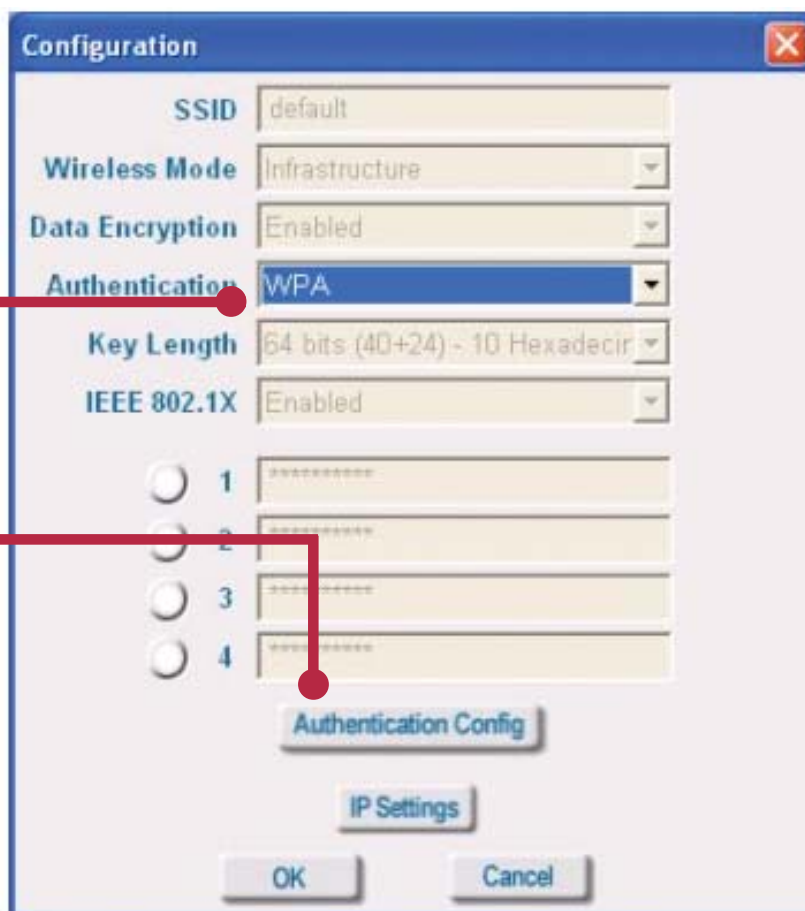

## Authentication >WPA > Advanced Security Settings

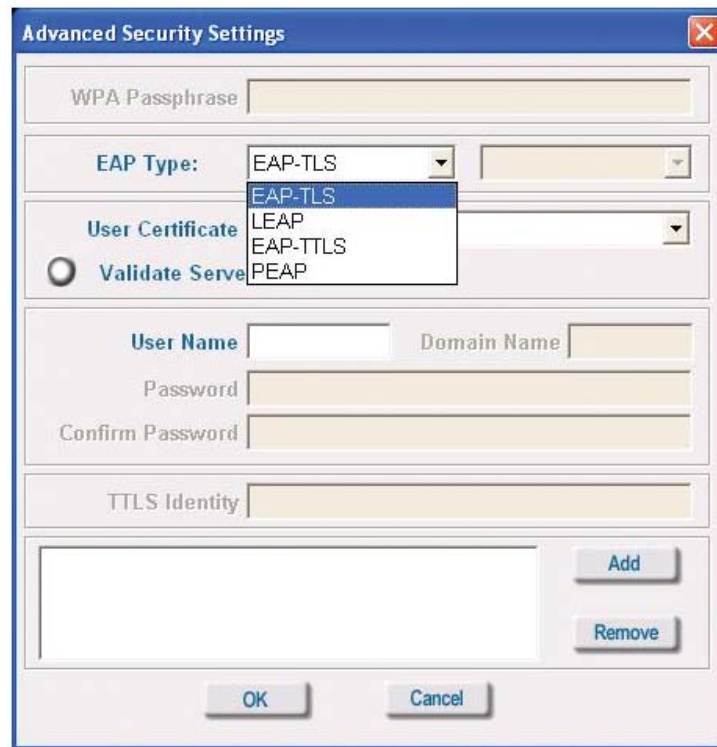

The 'Advanced Security Settings' dialog box contains the following fields and controls:

- WPA Passphrase:** A text input field.
- EAP Type:** A dropdown menu currently showing 'EAP-TLS'. A list of options is visible: EAP-TLS, LEAP, EAP-TTLS, and PEAP.
- User Certificate:** A dropdown menu.
- Validate Server:** A radio button.
- User Name:** A text input field.
- Domain Name:** A text input field.
- Password:** A text input field.
- Confirm Password:** A text input field.
- TTLS Identity:** A text input field.
- Buttons:** 'Add' and 'Remove' buttons are located to the right of the TTLS Identity field. 'OK' and 'Cancel' buttons are at the bottom.

**EAP Type:** Select the **EAP** type here.

**User Certificate:** Leave the **User Certificate** field blank.

**Validate Server:** Click **Validate Server** if your authentication server requires it.

**User Name:** Enter the **User Name**.

**Add:** When you click **Add**, the window below will appear.

**OK:** Click **OK** to save the changes.



The 'Edit Trust Server List' dialog box contains the following fields and controls:

- Enter the trust server :** A text input field.
- Buttons:** 'OK' and 'Cancel' buttons are at the bottom.

**Enter the Trust Server:** Enter the IP address of the RADIUS server in your network.


**OK:** Click OK to save the changes.



## Authentication > WPA-PSK

Select the available network to which you want to connect.


Click **Configure**.

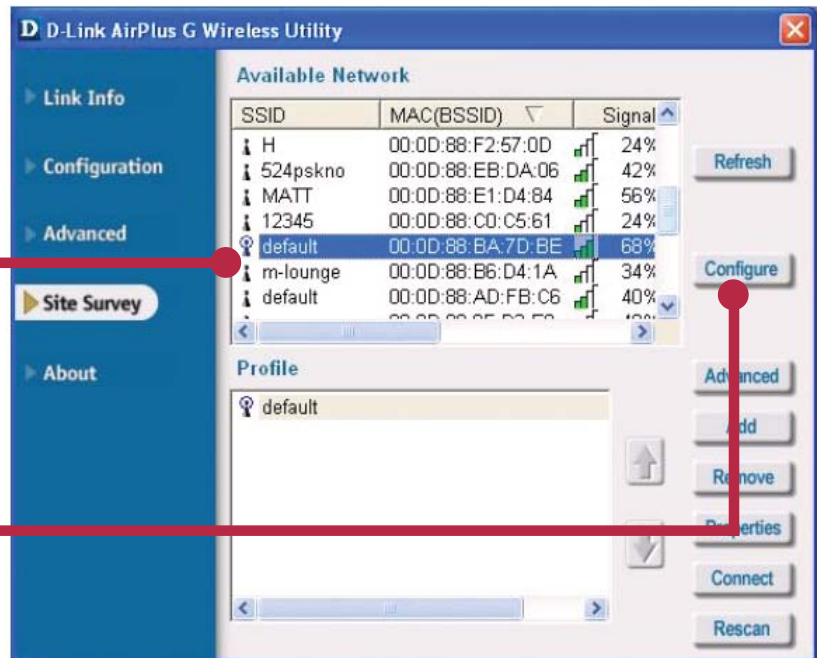

**!** **WPA-PSK** does not require a RADIUS server in the network.


Select **WPA-PSK** in the *Authentication* field.

Click **Authentication Config**.

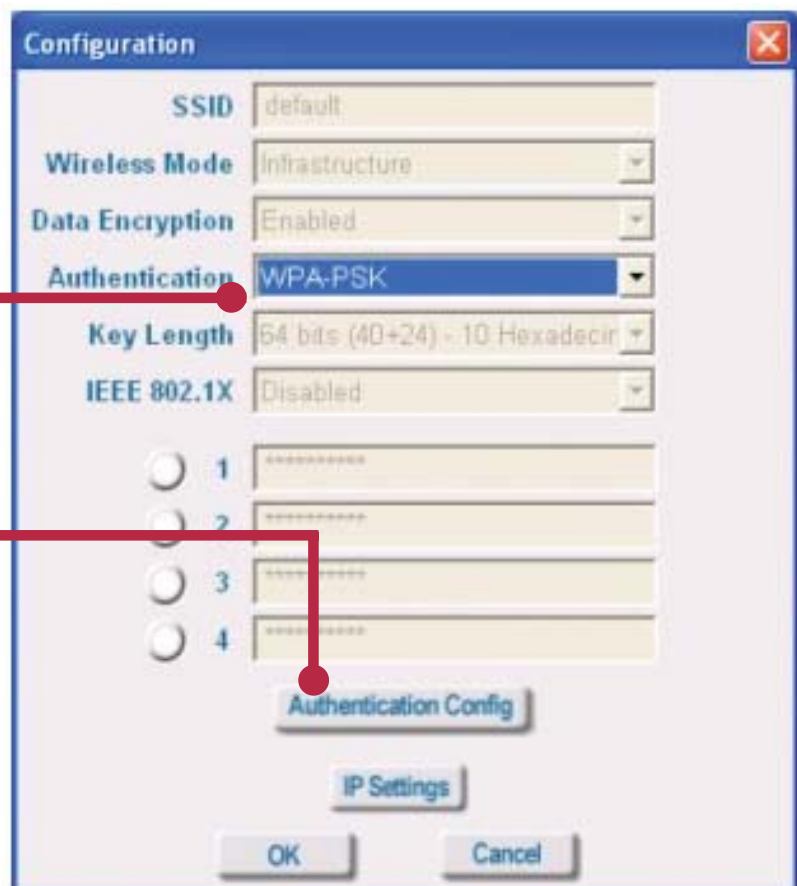

## Authentication >WPA-PSK (continued)

Enter the **WPA  
Passphrase**

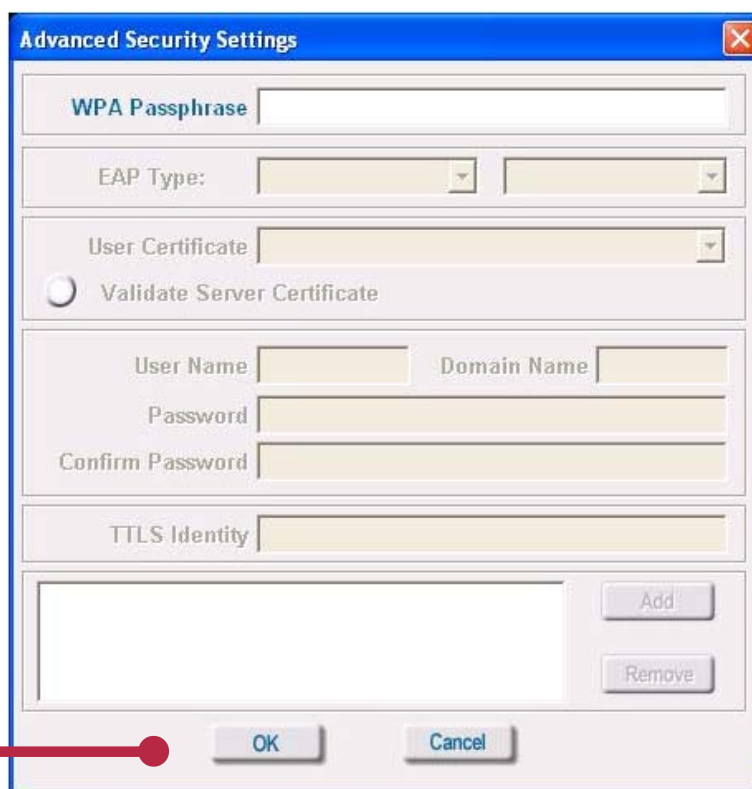


The 'Advanced Security Settings' dialog box contains the following fields and controls:

- WPA Passphrase:** A text input field.
- EAP Type:** Two dropdown menus.
- User Certificate:** A dropdown menu.
- Validate Server Certificate:** A radio button.
- User Name:** A text input field.
- Domain Name:** A text input field.
- Password:** A text input field.
- Confirm Password:** A text input field.
- TTLS Identity:** A text input field.
- Buttons:** 'Add', 'Remove', 'OK', and 'Cancel'.

Click **OK**. The  
configuration is  
done.

The About screen  
gives you the MAC  
address, Utility version  
and the Driver version  
of the DWL-AG132.

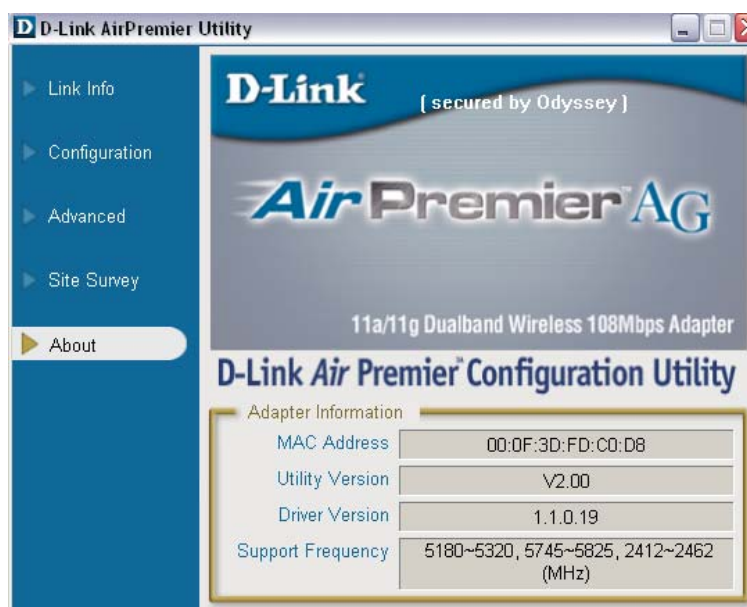

The 'About' screen displays the following information:

- Link Info**
- Configuration**
- Advanced**
- Site Survey**
- About** (selected)

**D-Link** [secured by Odyssey]  
**AirPremier AG**  
11a/11g Dualband Wireless 108Mbps Adapter  
**D-Link Air Premier Configuration Utility**

| Adapter Information |                                       |
|---------------------|---------------------------------------|
| MAC Address         | 00:0F:3D:FD:C0:D8                     |
| Utility Version     | V2.00                                 |
| Driver Version      | 1.1.0.19                              |
| Support Frequency   | 5180~5320, 5745~5825, 2412~2462 (MHz) |



# Networking Basics

## Using the Network Setup Wizard in Windows XP

In this section you will learn how to establish a network at home or work, using **Microsoft Windows XP**.

Note: Please refer to websites such as <http://www.homenethelp.com> and <http://www.microsoft.com/windows2000> for information about networking computers using Windows 2000.


Go to **Start>Control Panel>Network Connections**

Select **Set up a home or small office network**




When this screen appears, click **Next**.

Please follow all the instructions in this window:

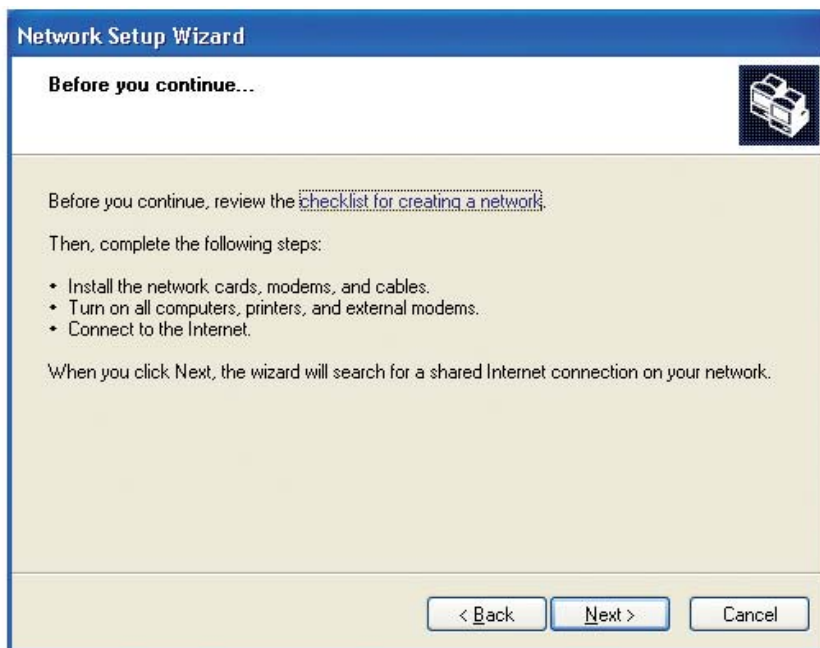


Click **Next**.

In the following window, select the best description of your computer. If your computer connects to the Internet through a router, select the second option as shown.

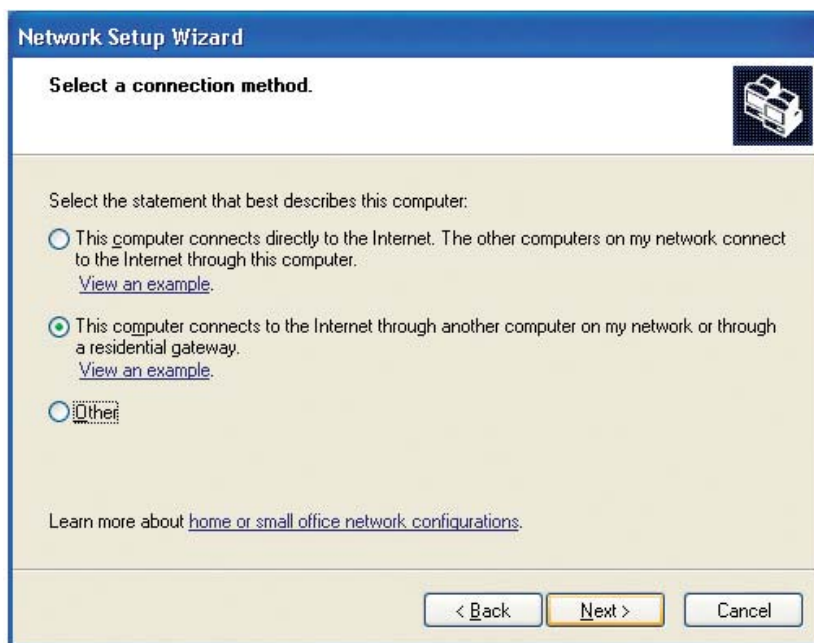


Click **Next**.

Enter a **Computer description** and a **Computer name** (optional.)

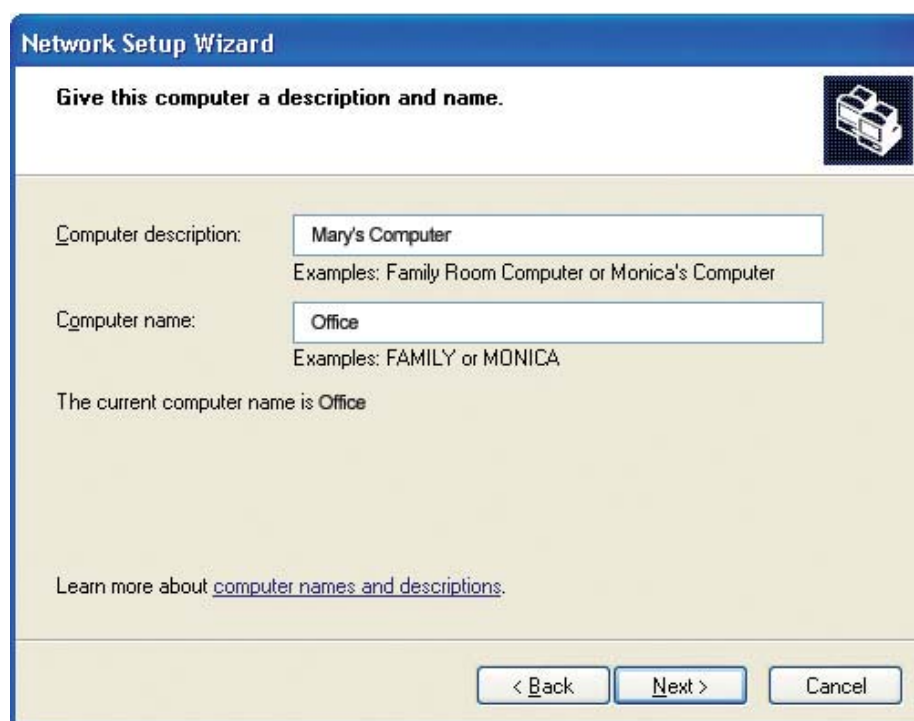The image shows a 'Network Setup Wizard' dialog box with a blue title bar. The main area has a light beige background. At the top, it says 'Give this computer a description and name.' with a small icon of two computers. Below this, there are two text input fields. The first is labeled 'Computer description:' and contains the text 'Mary's Computer'. Below it, examples are listed: 'Examples: Family Room Computer or Monica's Computer'. The second field is labeled 'Computer name:' and contains the text 'Office'. Below it, examples are listed: 'Examples: FAMILY or MONICA'. A line of text states 'The current computer name is Office'. At the bottom, there is a link that says 'Learn more about [computer names and descriptions.](#)'. At the very bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.


Click **Next**.

Enter a **Workgroup** name. All computers on your network should have the same **Workgroup name**.

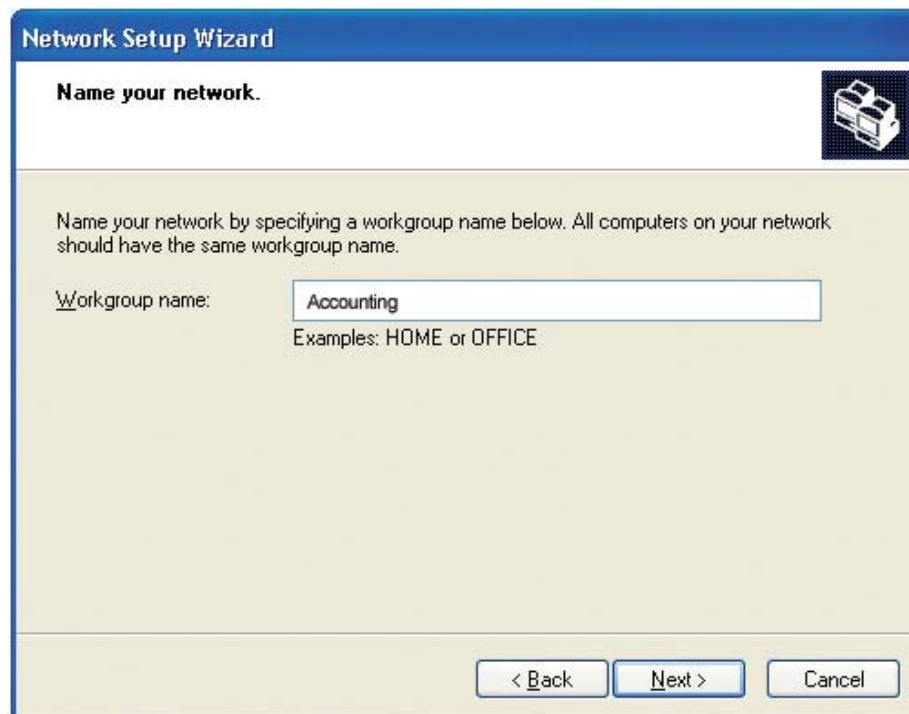The image shows a 'Network Setup Wizard' dialog box with a blue title bar. The main area has a light beige background. At the top, it says 'Name your network.' with a small icon of two computers. Below this, there is a paragraph of text: 'Name your network by specifying a workgroup name below. All computers on your network should have the same workgroup name.' Below the text, there is a text input field labeled 'Workgroup name:' which contains the text 'Accounting'. Below the field, examples are listed: 'Examples: HOME or OFFICE'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.


Click **Next**.

Please wait while the **Network Setup Wizard** applies the changes.

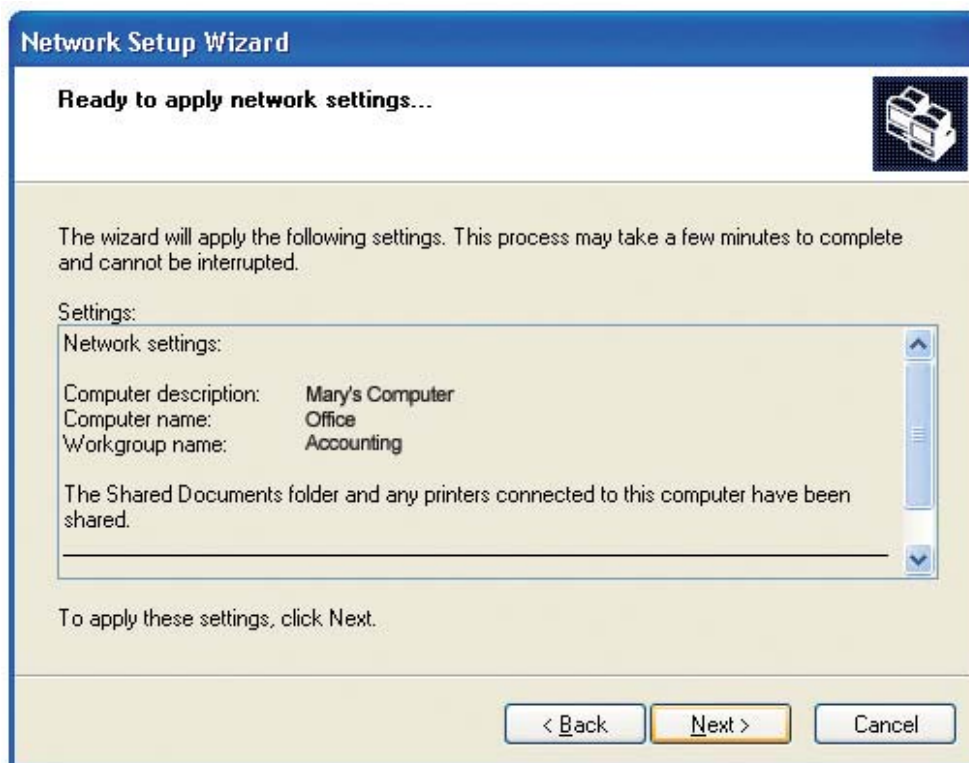


When the changes are complete, click **Next**.

Please wait while the **Network Setup Wizard** configures the computer. This may take a few minutes.

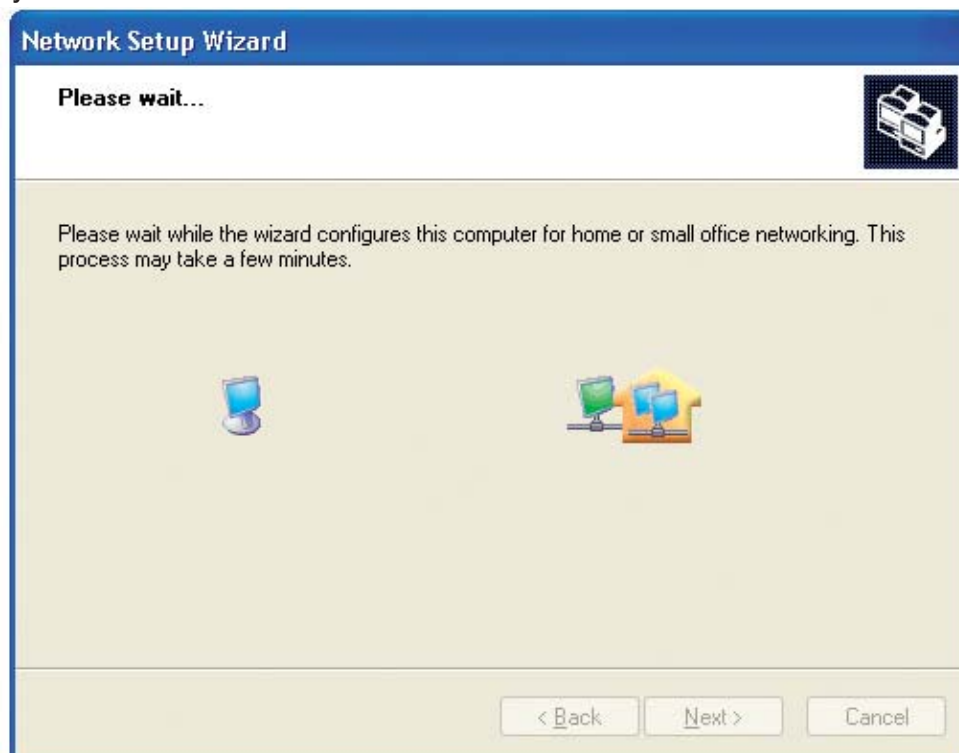

In the window below, select the option that fits your needs. In this example, **Create a Network Setup Disk** has been selected. You will run this disk on each of the computers on your network. Click **Next**.

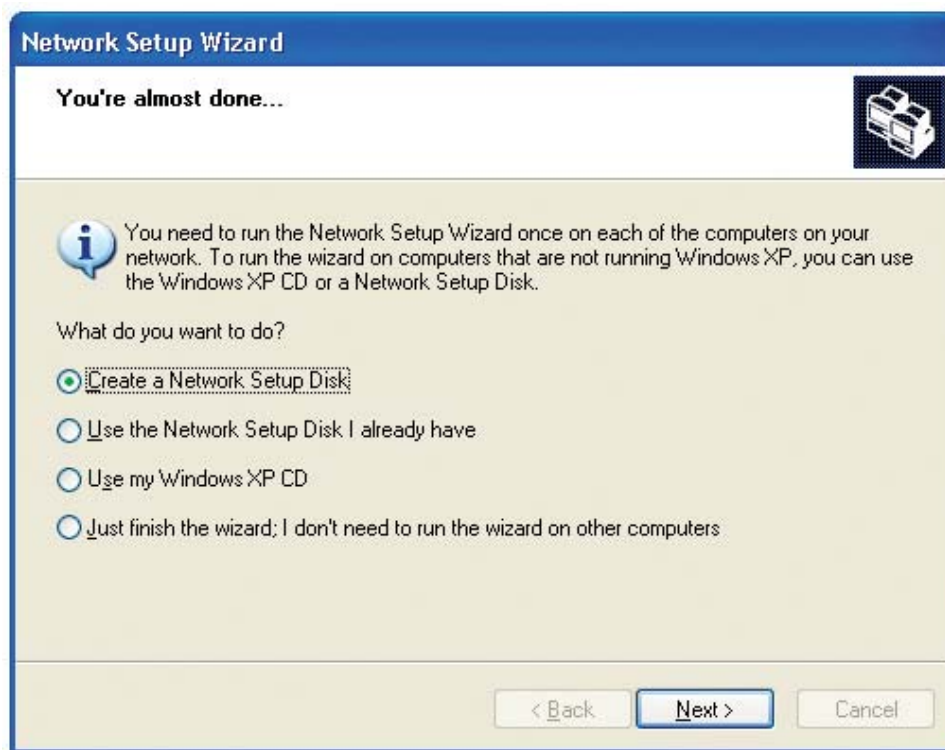


Insert a disk into the Floppy Disk Drive, in this case drive **A**.




Click **Next**.




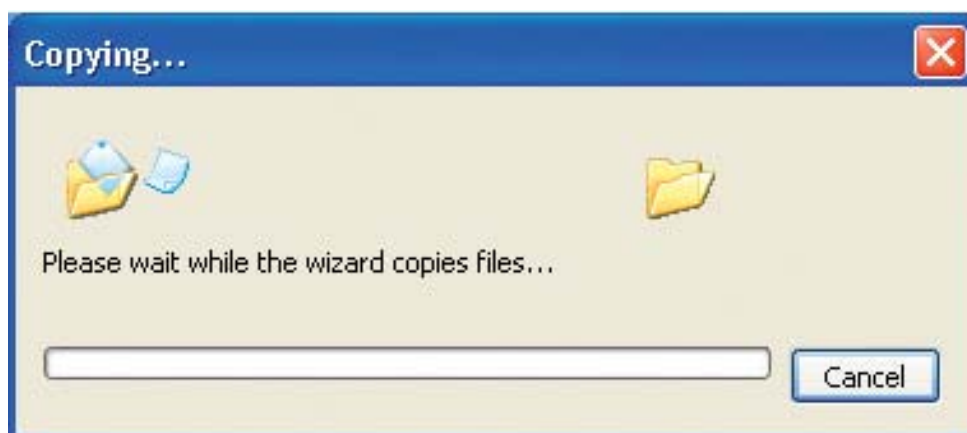

Please read the information under **Here's how** in the screen below. After you complete the **Network Setup Wizard** you will use the **Network Setup Disk** to run the **Network Setup Wizard** once on each of the computers on your network. Click **Next**.

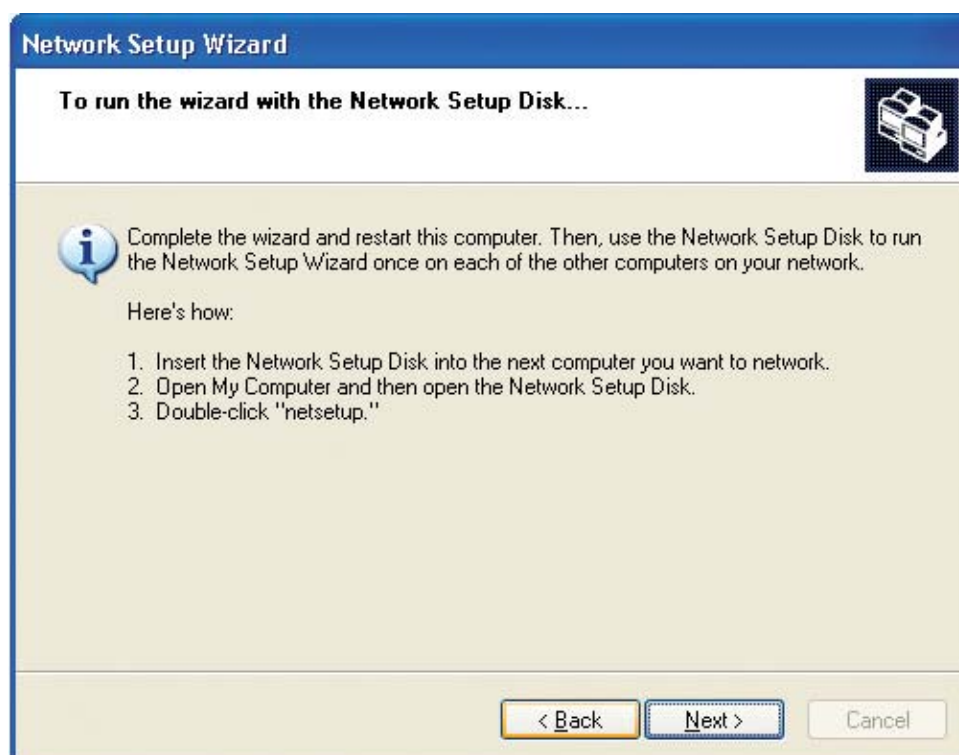

Please read the information on this screen, then click **Finish** to complete the **Network Setup Wizard**.

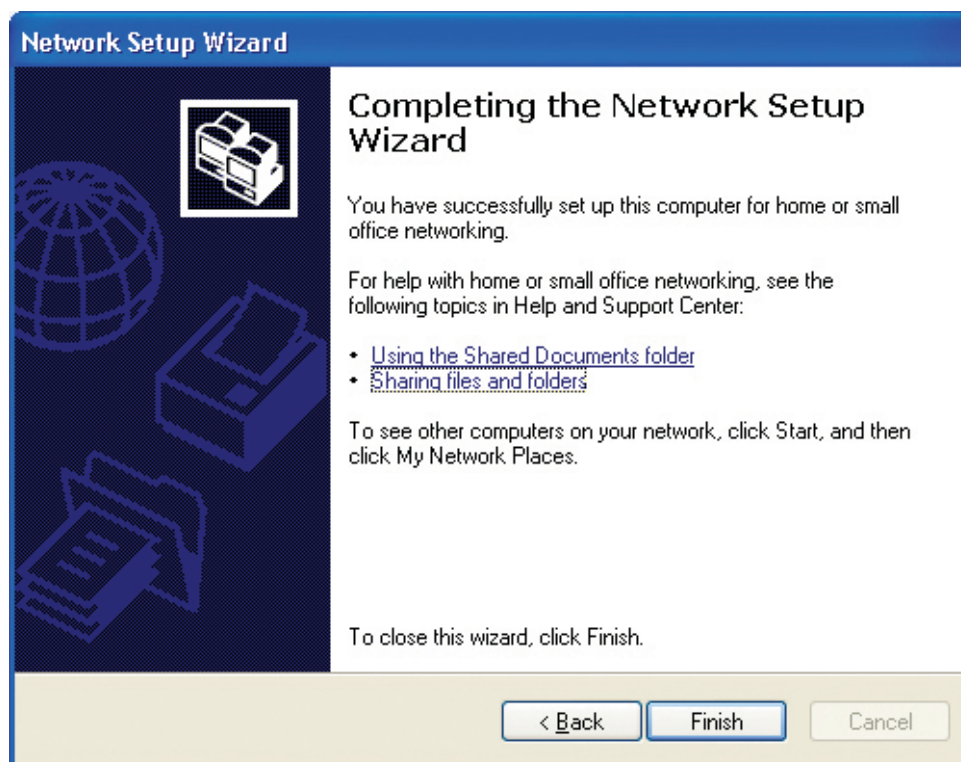


The new settings will take effect when you restart the computer. Click **Yes** to restart the computer.



You have completed configuring this computer. Next, you will need to run the **Network Setup Disk** on all the other computers on your network. After running the **Network Setup Disk** on all your computers, your new wireless network will be ready to use.

Please read the information on this screen, then click **Finish** to complete the **Network Setup Wizard**.

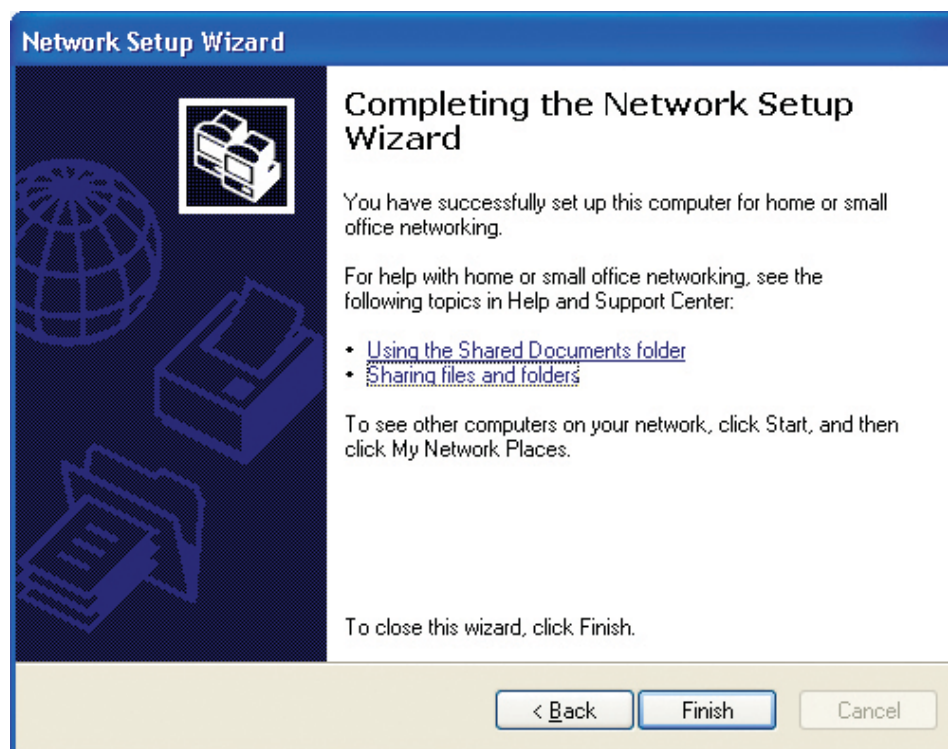

The new settings will take effect when you restart the computer. Click **Yes** to restart the computer.



You have completed configuring this computer. Next, you will need to run the **Network Setup Disk** on all the other computers on your network. After running the **Network Setup Disk** on all your computers, your new wireless network will be ready to use.



## Naming your Computer

To name your computer using **Windows XP**, please follow these directions:

Click **Start** (in the lower left corner of the screen).

**Right-click** on **My Computer**.


Select **Properties**.



Select the **Computer Name Tab** in the System Properties window.

You may enter a **Computer Description** if you wish; this field is optional.

To rename the computer and join a domain, click **Change**.

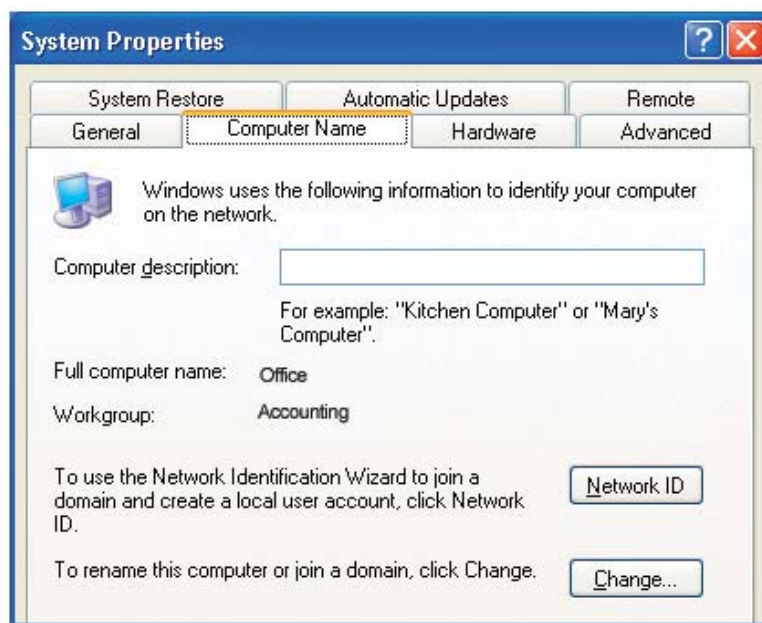


## Naming Your Computer

In this window, enter the **Computer name**.

Select **Workgroup** and enter the name of the **Workgroup**.

All computers on your network must have the same **Workgroup** name.

Click **OK**.

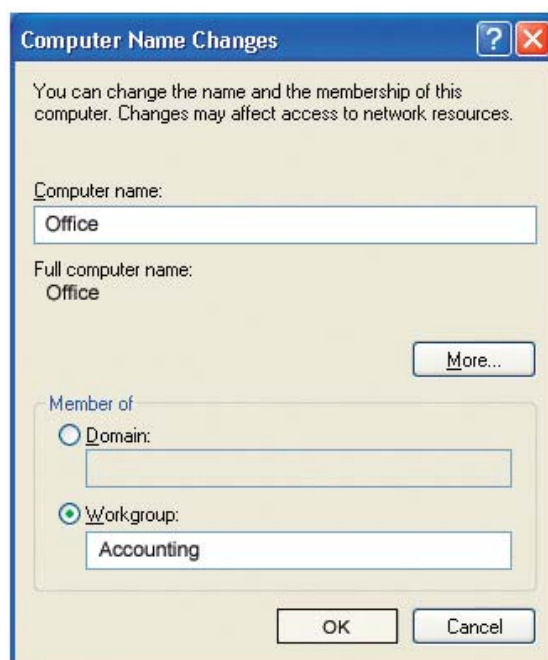


## Checking the IP Address in Windows XP

All wireless adapter-equipped computers in your network must be in the same IP address range (see **Getting Started** in this manual for a definition of IP address range.) To check on the IP address of an adapter, please do the following:


Right-click on the **Local Area Connection icon** in the task bar.

Click on **Status**.

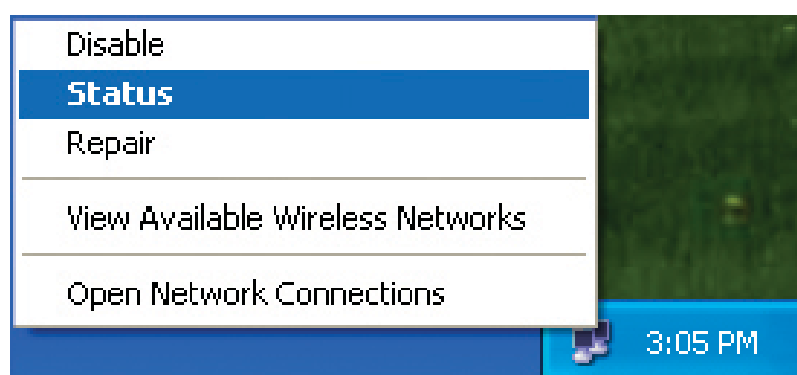

## Checking the IP Address in Windows XP

Click the **Support** tab.

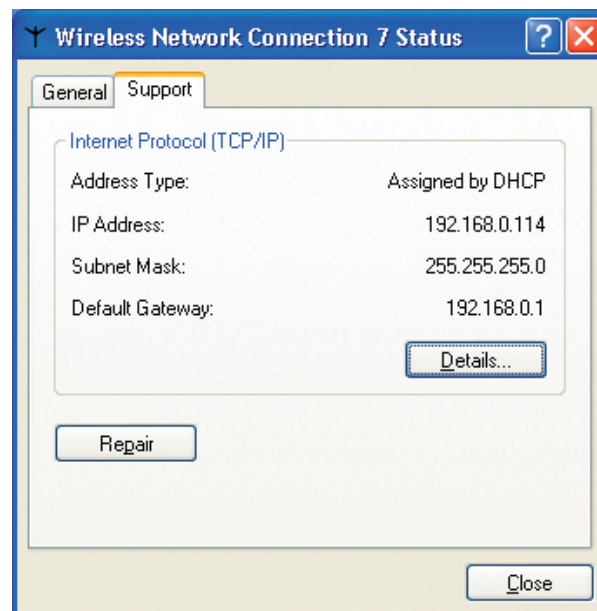

Click **Close**.

## Assigning a Static IP Address in Windows XP/2000

Note: Many broadband routers will automatically assign IP addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable router you will not need to assign static IP addresses.

If you are not using a DHCP capable router, or you need to assign a static IP address, please follow these instructions:



Go to **Start**.

Click on **Control Panel**.



## Assigning a Static IP Address in Windows XP/2000

Double-click on **Network Connections**.

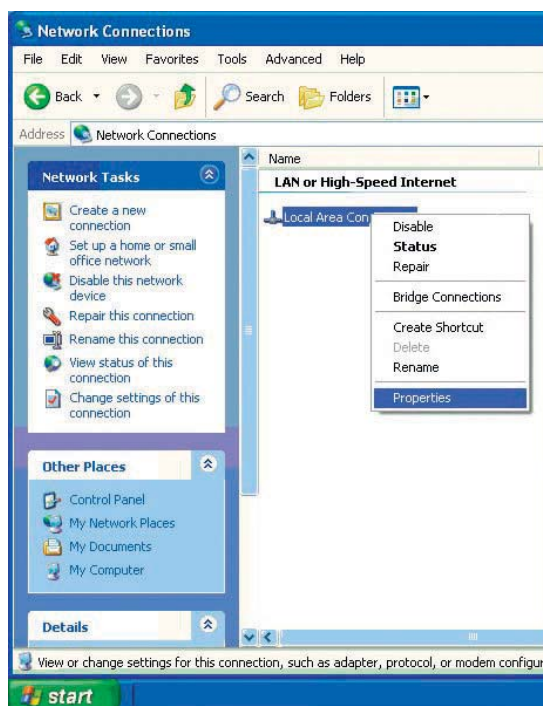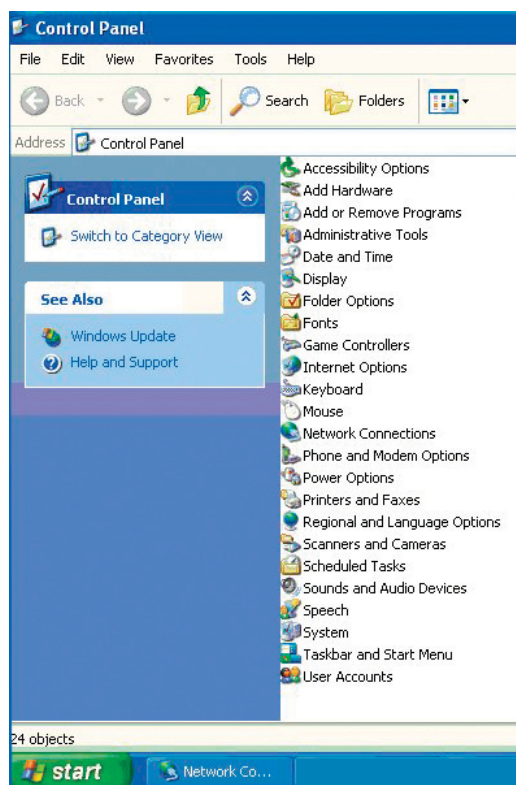


Right-click on **Local Area Connections**.

Click on **Properties**.

## Assigning a Static IP Address in Windows XP/2000

Click on **Internet Protocol (TCP/IP)**.


Click **Properties**.

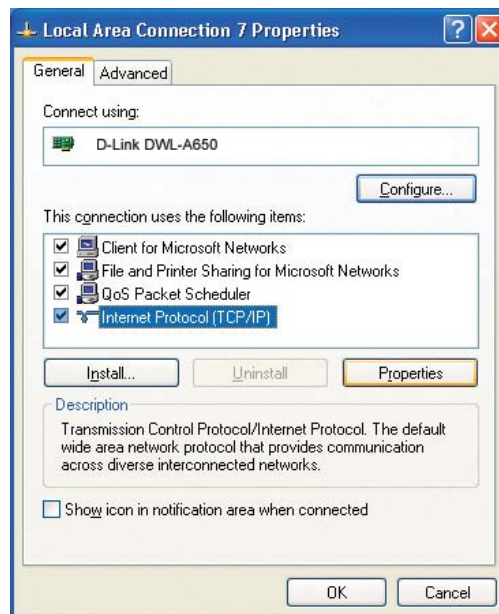

Input your **IP address and subnet mask**. (The IP addresses on your network must be within the same range. For example, if one computer has an IP address of 192.168.0.2, the other computers should have IP addresses that are sequential, like 192.168.0.3 and 192.168.0.4. The subnet mask must be the same for all the computers on the network.)


Input your DNS server addresses. (Note: If you are entering a DNS server, you must enter the IP address of the Default Gateway.)

The DNS server information will be supplied by your ISP (Internet Service Provider.)

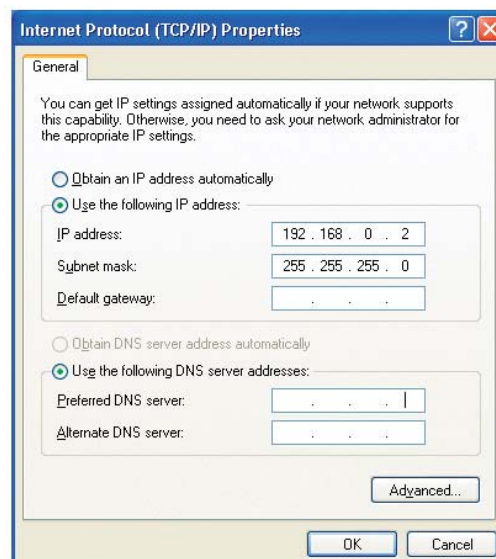

Click **OK**.

## Checking the Wireless Connection by Pinging in Windows XP and 2000

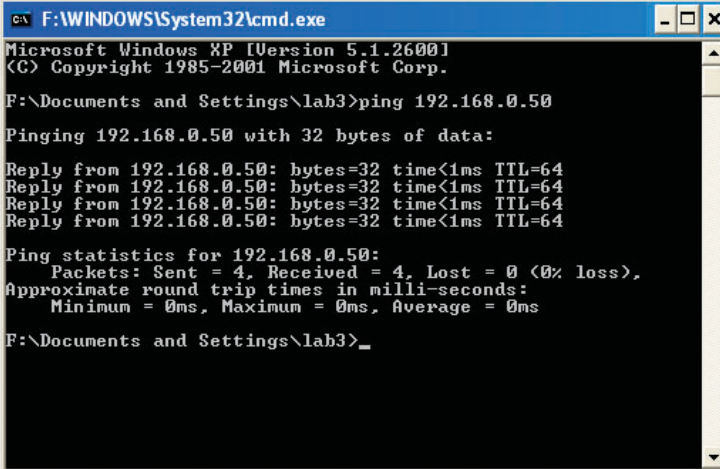

```
F:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab3>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:

Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

F:\Documents and Settings\lab3>_
```

Go to **Start > Run >** type **cmd**. A window similar to this one will appear. Type **ping xxx.xxx.xxx.xxx**, where **xxx** is the **IP address** of the wireless router or access point. A good wireless connection will show four replies from the wireless router or access point, as shown.




# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DWL-AG132. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows XP. If you have another operating system, these solutions will still apply although the appearance on your computer screen may differ.)


## 1. How do I check to see that the drivers for the DWL-AG132 are installed properly?

Go to **Start > My Computer > Properties**.

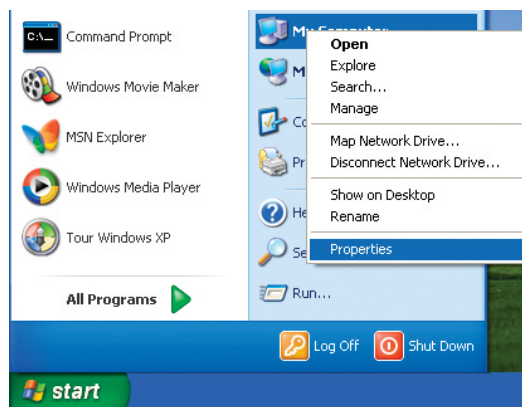

Select the **Hardware Tab**.


Click **Device Manager**.

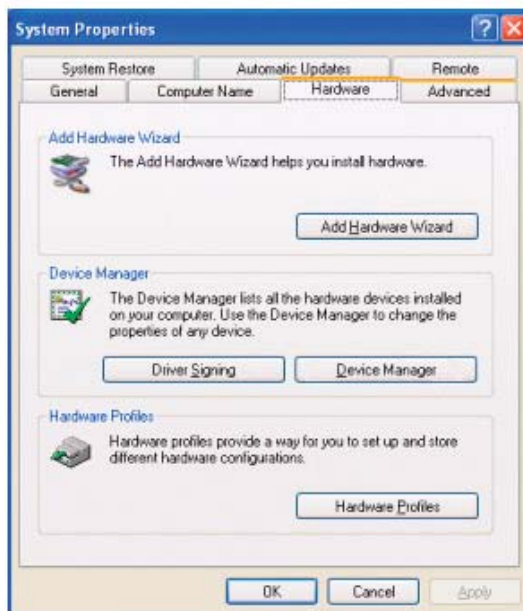

Double-click on **Network Adapters**.

Right-click on **D-Link AirPremier AG DWL-AG132 Wireless USB Adapter**.

Select **Properties** to check that the drivers are installed properly.

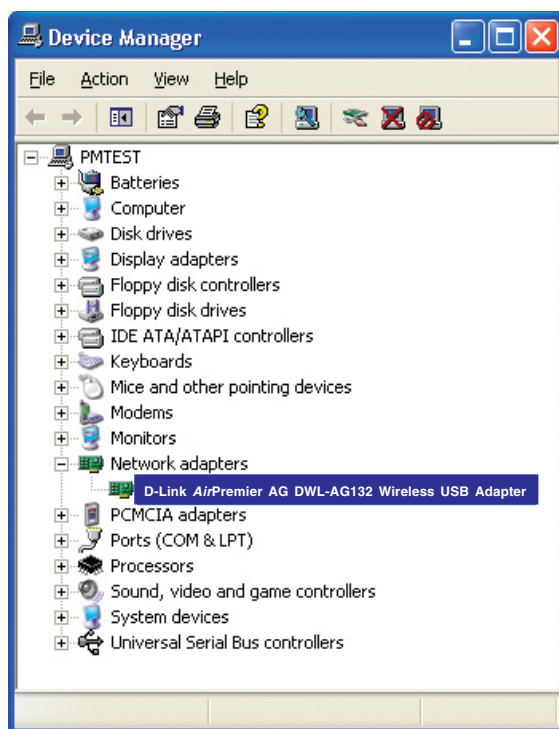

Look under **Device Status** to check that the device is working properly.



Click **OK**.



## 2. What variables may cause my wireless products to lose reception?

D-Link products let you access your network from virtually anywhere you want. However, the positioning of the products within your environment will affect the wireless range. Please refer to **Installation Considerations** in the **Wireless Basics** section of this manual for further information about the most advantageous placement of your D-Link wireless products.

## 3. Why does my wireless connection keep dropping?

If you are using 2.4GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, and lights, your wireless connection will degrade dramatically or drop altogether. Try changing the channel on your router, access point and wireless adapter to a different channel to avoid interference.

Keep your product away (at least 3-6 feet) from electrical devices that generate RF noise, like microwaves, monitors, electric motors, etc.

## 4. Why can't I get a wireless connection?

If you have enabled encryption on the DWL-AG132, you must also enable encryption on all wireless devices in the network in order to establish a wireless connection.

The encryption settings are: 64-, 128- and 152-bit. Make sure that the encryption bit level is the same on the router and the DWL-AG132.


Make sure that the SSID on the wireless router (if you have one in your network) and the DWL-AG132 are exactly the same. If they are not, wireless connection will not be established. The default SSID is **default**.

# Technical Specifications

|                              |  |              |              |  |
|------------------------------|--|--------------|--------------|--|
| <b>Standard</b>              | USB 2.0 <sup>1</sup>   |              |              |  |
|                              | IEEE 802.11g   | IEEE 802.11b | IEEE 802.11a |  |
| <b>Bus Type</b>              | USB 2.0  |              |              |  |
| <b>Temperature</b>           | Operating: 0°C to 40°C (32°F to 104°F)                               |              |              |  |
|                              | Storing: -20°C to 75°C (4°F to 167°F)                                |              |              |  |
| <b>Humidity</b>              | 80% maximum, non-condensing  |              |              |  |
| <b>Antenna Type</b>          | Omni-directional   |              |              |  |
| <b>Modulation Technology</b> | Orthogonal Frequency Division Multiplexing (OFDM)                    |              |              |  |
|                              | Complimentary Code Keying (CCK)                                      |              |              |  |
| <b>Security</b>              | 64-, 128-, 152-bit WEP   |              |              |  |
|                              | WPA - Wi-Fi Protected Access   |              |              |  |
| <b>Data Rates</b>            | 54, 48, 36, 24, 18, 11, 9, 6 5.5, 2, 1Mbps (with Automatic Fallback) |              |              |  |
| <b>Frequency Range</b>       | 2.4GHz to 2.462GHz   |              |              |  |
| <b>Range<sup>2</sup></b>     | Indoors: Up to 328 feet (100 meters)                                 |              |              |  |
|                              | Outdoors: Up to 1,312 feet (400 meters)                              |              |              |  |
| <b>Media Access Control</b>  | CSMA/CA with ACK   |              |              |  |

1 - Using a USB 1.1 port will adversely affect range

2 - Environmental factors may adversely affect wireless signal range

|  |                                 |  |
|--|---------------------------------|--|
|  | <b>Receiver Sensitivity</b>     | 54Mbps OFDM<br>48Mbps OFDM<br>36Mbps OFDM<br>24Mbps OFDM<br>18Mbps OFDM<br>12Mbps OFDM<br>11Mbps OFDM<br>9Mbps OFDM<br>6Mbps OFDM<br>5.5Mbps CCK<br>2Mbps QPSK<br>1Mbps BPSK |
|  | <b>Transmitter Output Power</b> | 14Bm ± 2dB   |
|  | <b>Physical Dimensions</b>      | L = 3.3 inches<br>W = 2.1 inches<br>H = 0.2 inches   |
|  | <b>Weight</b>                   | 0.021 lb. (4.4g)   |
|  | <b>Certifications</b>           | FCC part 15b   |
|  | <b>Warranty</b>                 | 1 year   |

# Contacting Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our web site, or by phone.

## **Tech Support for customers within the United States:**

*D-Link Technical Support over the Telephone:*

(877) 453-5465

Monday through Friday 6:00am to 6:00pm.

*D-Link Technical Support over the Internet:*

<http://support.dlink.com>

[email:support@dlink.com](mailto:support@dlink.com)

## **Tech Support for customers within Canada:**

*D-Link Technical Support over the Telephone:*

(800) 361-5265

Monday to Friday 8:30am to 9:00pm EST

*D-Link Technical Support over the Internet:*

<http://support.dlink.ca>

[email:support@dlink.ca](mailto:support@dlink.ca)

When contacting technical support, please provide the following information:

- *Serial number of the unit*
- *Model number or product name*

# Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

**Limited Warranty:** D-Link warrants that the hardware portion of the D-Link product described below ("Hardware") will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below ("Warranty Period"), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

**Limited Software Warranty:** D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Software Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

**Non-Applicability of Warranty:** The Limited Warranty provided hereunder for Hardware and Software portions of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

**Submitting A Claim:** The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization ("RMA") number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to **D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708**. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

**What Is Not Covered:** The Limited Warranty provided herein by D-Link does not cover: Products that, in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

**Disclaimer of Other Warranties:** EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

**Limitation of Liability:** TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

**Governing Law:** This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

**Trademarks:** D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

**Copyright Statement:** No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice. Copyright 2005 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

**CE Mark Warning:** This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**FCC Statement:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.**

**FCC Caution:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

For operation within 5.15~5.25GHz frequency range, it is restricted to indoor environment, and the antenna of this device must be integral.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:****FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with FCC RF Exposure limits set forth for an uncontrolled environment, under 47 CFR 2.1093 paragraph (d)(2).

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Highest SAR Value: 0.359 W/Kg



# Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

022805\_vA1